



2/17/2011

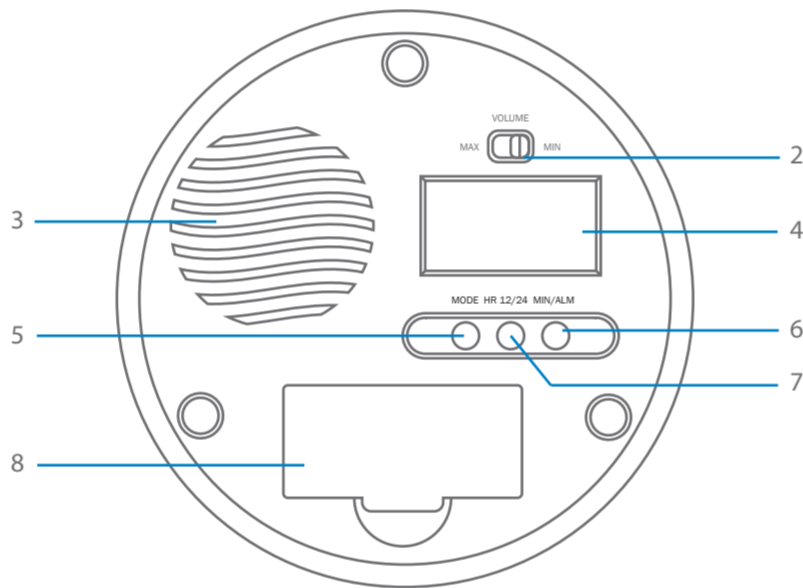

PLH IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

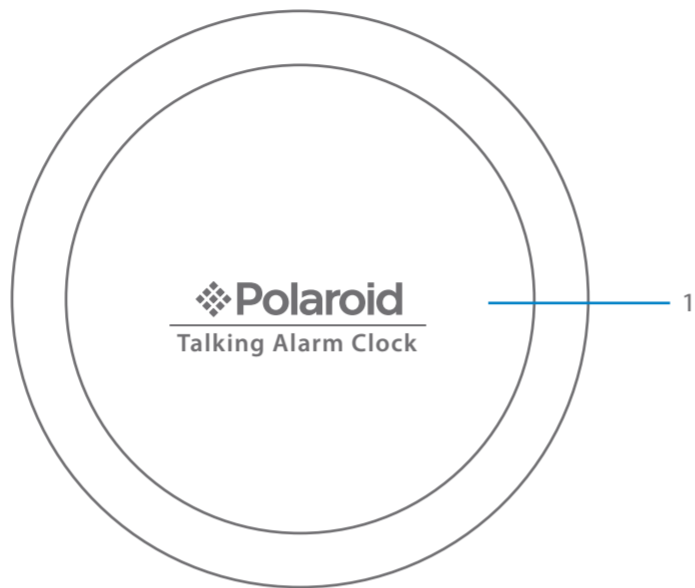

- 
- Polaroid**
Talking Alarm Clock

A Polaroid FOS200 Big Button Telling Alarm Clock. The clock is white with a large, circular, textured button in the center. The Polaroid logo is visible on the button. The text 'BIG Button', 'Telling Alarm Clock', and 'FOS200' is printed in blue and black on the left side. The Polaroid logo is in the top right corner. Below the clock image is a black bar with the text 'User Manual' in white.

 - **CHM2** – The clock will chime every hour from 7am to 9pm.

OFF (no icon) - The clock will not chime.

1. Press the **[MODE]** button three times. The chime icons in the lower left corner of the LCD will start flashing.
2. Press the **[HR 12/24]** button to choose between **CHM1**, **CHM2** or **OFF (no icon)**.
3. Press the **[MODE]** button once to exit the chime setting mode **OR** do not press any buttons and after ten seconds of inactivity the chime setting will be saved.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<table border="1"><tr><td data-bbox="352 1896 532 1917">CAUTION</td></tr><tr><td data-bbox="352 1917 532 1938">RISK OF ELECTRIC SHOCK DO NOT OPEN</td></tr></table> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	CAUTION	RISK OF ELECTRIC SHOCK DO NOT OPEN	 <p>The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>
CAUTION				
RISK OF ELECTRIC SHOCK DO NOT OPEN				